


# TELEGAMES USA

## *Personal Arcade™*

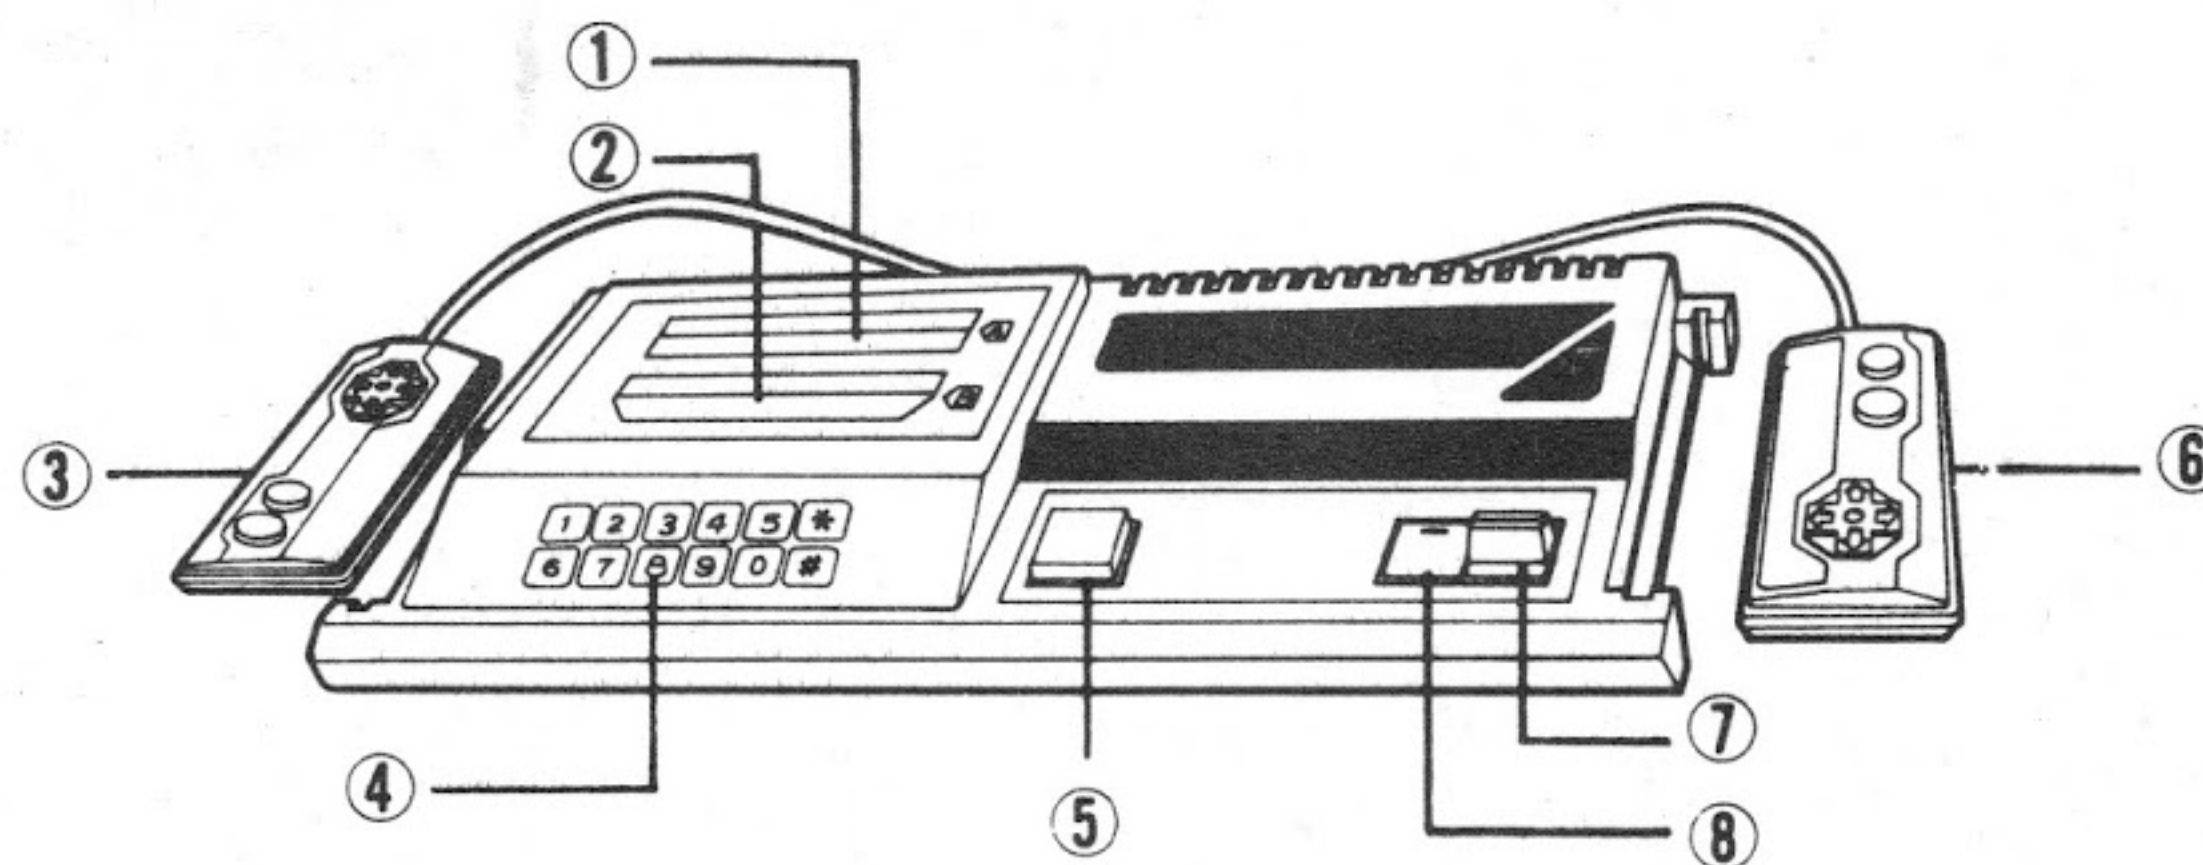


- 1. Expansion Port  
(future use)
- 2. Cartridge Port
- 3. Joystick I
- 4. Keypad

- 5. Expansion Port Pause  
(do not use with cartridges)
- 6. Joystick II
- 7. Power Switch
- 8. Power Indicator Light

# Your Telegames Personal Arcade

- Personal Arcade console unit
- 2 Joystick Controllers
- AC Power Adaptor
- TV/Game Switch Box  
(with flat twin lead-in wires)
- Video Cable

Note: If your TV does not have a twin-lead antenna connection, you will need to purchase a coaxial cable adaptor. It's available at nominal cost from your local TV/stereo stores.

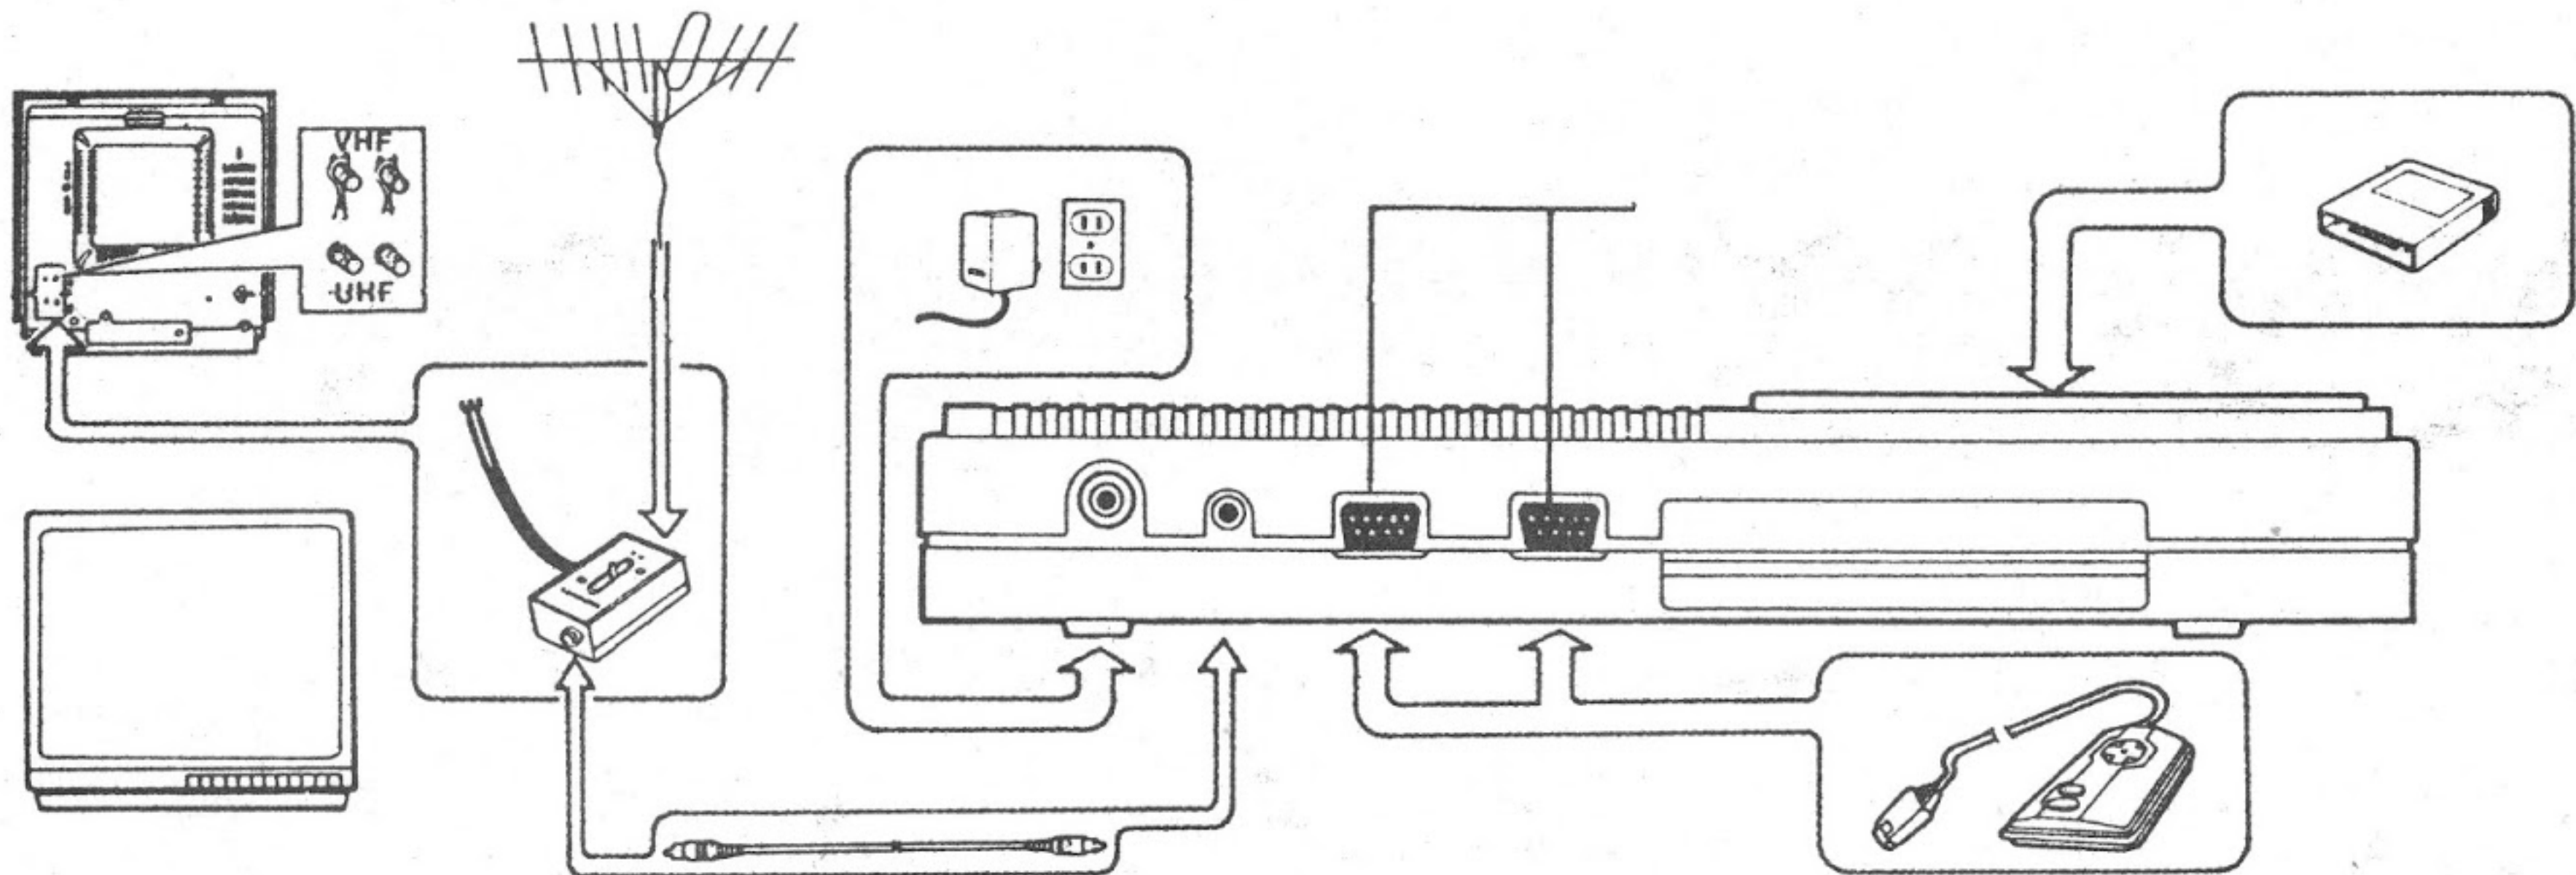



# Telegames Personal Arcade Installation

1. A flat screwdriver is all you will need to install the TV/GAME SWITCH BOX. Look at the back of your TV set and note which antenna configuration you have: flat, twin-lead VHF (two screws) or round coaxial cable (short round screw):
    - a. Standard VHF: Disconnect your VHF antenna cable from the TV and attach it to the TV side of the switch box. Connect the switch box antenna to the VHF screws on the TV.
    - b. Coaxial cable: Disconnect your antenna cable from the TV set. Attach the flat switch box antenna to the two screws on the cable adaptor, then plug the adaptor onto the round VHF screw on the TV.
    - c. Slider switch: Connect the switch box same as either (a) or (b) above, then set the switch to the side marked "300 ohm" or "300X".
  2. The switch box lets you change from game mode to normal TV reception, without having to remove the box each time\*. Simply move the switch to "GAME" to play, and remember to return the switch to "TV" before watching television.
  3. Plug one end of the VIDEO CABLE into the game console; plug the other end into the GAME side of the switch box.
  4. Plug the round end of the AC POWER ADAPTOR into the power jack on the game console; plug the square end of the power adaptor into a regular wall socket.
  5. Plug the JOYSTICKS into the Joystick Ports.
  6. Turn on the TV; set it to channel 13, and play the ON-board game.
  7. Insert a game cartridge into the cartridge slot "B" in the console. Make sure it's firmly seated, but DO NOT FORCE IT. Turn on TV; set it to channel 13, and play the cartridge.
  8. Switch on the game console POWER. Always turn the console power OFF when inserting or removing a game program cartridge.
- \*If you have coaxial house antenna, you'll have to disconnect the switch box adaptor and reconnect your antenna to the back of the TV before watching television.

**TELEGAMES USA**  
222 W. First Street  
Lancaster, TX 75146  
(214) ~~227-7694~~

228-0690